

uCables.com

Tecnologias de diagnostico y reparacion de automoviles

B - OBD2 Body Codes

Code	Description
B1200	Climate Control Pushbutton Circuit Failure
B1201	Fuel Sender Circuit Failure
B1202	Fuel Sender Circuit Open
B1203	Fuel Sender Circuit Short To Battery
B1204	Fuel Sender Circuit Short To Ground
B1205	EIC Switch-1 Assembly Circuit Failure
B1206	EIC Switch-1 Assembly Circuit Open
B1207	EIC Switch-1 Assembly Circuit Short To Battery
B1208	EIC Switch-1 Assembly Circuit Short To Ground
B1209	EIC Switch-2 Assembly Circuit Failure
B1210	EIC Switch-2 Assembly Circuit Open
B1211	EIC Switch-2 Assembly Circuit Short To Battery
B1212	EIC Switch-2 Assembly Circuit Short To Ground
B1213	Anti-Theft Number of Programmed Keys Is Below Minimum
B1214	Running Board Lamp Circuit Failure
B1215	Running Board Lamp Circuit Short to Battery
B1216	Emergency & Road Side Assistance Switch Circuit Short to Ground
B1217	Horn Relay Coil Circuit Failure
B1218	Horn Relay Coil Circuit Short to Vbatt
B1219	Fuel Tank Pressure Sensor Circuit Failure
B1220	Fuel Tank Pressure Sensor Circuit Open
B1222	Fuel Temperature Sensor #1 Circuit Failure
B1223	Fuel Temperature Sensor #1 Circuit Open
B1224	Fuel Temperature Sensor #1 Circuit Short to Battery
B1225	Fuel Temperature Sensor #1 Circuit Short to Ground
B1226	Fuel Temperature Sensor #2 Circuit Failure
B1227	Fuel Temperature Sensor #2 Circuit Open
B1228	Fuel Temperature Sensor #2 Circuit Short to Battery
B1229	Fuel Temperature Sensor #2 Circuit Short to Ground
B1231	Longitudinal Acceleration Threshold Exceeded
B1232	See Manufacturer
B1233	Glass Break Sensor Failure
B1234	Mirror Switch Invalid Code
B1235	Window Feedback Failure
B1236	Window Feedback Loss of Signal
B1237	Window Feedback Out of Range
B1238	Over Temperature Fault
B1239	Air Flow Blend Door Driver Circuit Failure
B1240	Wiper Washer Rear Pump Relay Circuit Failure
B1241	Wiper Washer Rear Pump Relay Circuit Short to Battery
B1242	Air Flow Recirculation Door Driver Circuit Failure
B1243	Express Window Down Switch Circuit Short to Battery
B1244	Wiper Rear Motor Run Relay Circuit Failure
B1245	Wiper Rear Motor Run Relay Circuit Short to Battery
B1246	Dim Panel Potentiometer Switch Circuit Failure
B1247	Panel Dim Switch Circuit Open
B1248	Passenger's Seatback Autoglide Rearward Switch Circuit Short to Ground
B1249	Blend Door Failure

B1250 Air Temperature Internal Sensor Circuit Failure
B1251 Air Temperature Internal Sensor Circuit Open
B1252 Air Temperature Internal Sensor Circuit Short To Battery
B1253 Air Temperature Internal Sensor Circuit Short To Ground
B1254 Air Temperature External Sensor Circuit Failure
B1255 Air Temperature External Sensor Circuit Open
B1256 Air Temperature External Sensor Circuit Short To Battery
B1257 Air Temperature External Sensor Circuit Short To Ground
B1258 Solar Radiation Sensor Circuit Failure
B1259 Solar Radiation Sensor Circuit Open
B1260 Solar Radiation Sensor Circuit Short To Battery
B1261 Solar Radiation Sensor Circuit Short To Ground
B1262 Servo Motor Defrost Circuit Failure
B1263 Servo Motor Vent Circuit Failure
B1264 Servo Motor Foot Circuit Failure
B1265 Servo Motor Coolair Bypass Circuit Failure
B1266 Servo Motor Airintake Left Circuit Failure
B1267 Servo Motor Airintake Right Circuit Failure
B1268 Servo Motor Potentiometer Defrost Circuit Failure
B1269 Servo Motor Potentiometer Defrost Circuit Open
B1270 Servo Motor Potentiometer Defrost Circuit Short To Battery
B1271 Servo Motor Potentiometer Defrost Circuit Short To Ground
B1272 Servo Motor Potentiometer Vent Circuit Failure
B1273 Servo Motor Potentiometer Vent Circuit Open
B1274 Servo Motor Potentiometer Vent Circuit Short To Battery
B1275 Servo Motor Potentiometer Vent Circuit Short To Ground
B1276 Servo Motor Potentiometer Foot Circuit Failure
B1277 Servo Motor Potentiometer Foot Circuit Open
B1278 Servo Motor Potentiometer Foot Circuit Short To Battery
B1279 Servo Motor Potentiometer Foot Circuit Short To Ground
B1280 Servo Motor Potentiometer Coolair Circuit Failure
B1281 Servo Motor Potentiometer Coolair Circuit Open
B1282 Servo Motor Potentiometer Coolair Circuit Short To Battery
B1283 Servo Motor Potentiometer Coolair Circuit Short To Ground
B1284 Servo Motor Potentiometer Airintake Left Circuit Failure
B1285 Servo Motor Potentiometer Airintake Left Circuit Open
B1286 Servo Motor Potentiometer Airintake Left Circuit Short To Battery
B1287 Servo Motor Potentiometer Airintake Left Circuit Short To Ground
B1288 Servo Motor Potentiometer Airintake Right Circuit Failure
B1289 Servo Motor Potentiometer Airintake Right Circuit Open
B1290 Servo Motor Potentiometer Airintake Right Circuit Short To Battery
B1291 Servo Motor Potentiometer Airintake Right Circuit Short To Ground
B1292 Battery Power Relay Circuit Failure
B1293 Battery Power Relay Circuit Open
B1294 Battery Power Relay Circuit Short To Battery
B1295 Battery Power Relay Circuit Short To Ground
B1296 Power Supply Sensor Circuit Failure
B1297 Power Supply Sensor Circuit Open
B1298 Power Supply Sensor Circuit Short To Battery
B1299 Power Supply Sensor Circuit Short To Ground
B1300 Power Door Lock Circuit Failure
B1301 Power Door Lock Circuit Open
B1302 Accessory Delay Relay Coil Circuit Failure
B1303 Accessory Delay Relay Coil Circuit Open
B1304 Accessory Delay Relay Coil Circuit Short To Battery
B1305 Accessory Delay Relay Coil Circuit Short To Ground

B1306 Oil Level Switch Circuit Open
B1307 Oil Level Switch Circuit Short To Battery
B1308 Oil Level Switch Circuit Short To Ground
B1309 Power Door Lock Circuit Short To Ground
B1310 Power Door Unlock Circuit Failure
B1311 Power Door Unlock Circuit Open
B1312 Lamp Headlamp Input Circuit Short To Battery
B1313 Battery Saver Relay Coil Circuit Failure
B1314 Battery Saver Relay Coil Circuit Open
B1315 Battery Saver Relay Coil Circuit Short To Battery
B1316 Battery Saver Relay Coil Circuit Short To Ground
B1317 Battery Voltage High
B1318 Battery Voltage Low
B1319 Driver Door Ajar Circuit Failure
B1320 Driver Door Ajar Circuit Open
B1321 Driver Door Ajar Circuit Short To Battery
B1322 Driver Door Ajar Circuit Short To Ground
B1323 Door Ajar Lamp Circuit Failure
B1324 Door Ajar Lamp Circuit Open
B1325 Door Ajar Lamp Circuit Short To Battery
B1326 Door Ajar Lamp Circuit Short To Ground
B1327 Passenger Door Ajar Circuit Failure
B1328 Passenger Door Ajar Circuit Open
B1329 Passenger Door Ajar Circuit Short To Battery
B1330 Passenger Door Ajar Circuit Short To Ground
B1331 Decklid Ajar Rear Door Circuit Failure
B1332 Decklid Ajar Rear Door Circuit Open
B1333 Decklid Ajar Rear Door Circuit Short To Battery
B1334 Decklid Ajar Rear Door Circuit Short To Ground
B1335 Door Ajar RR Circuit Failure
B1336 Door Ajar RR Circuit Open
B1337 Door Ajar RR Circuit Short To Battery
B1338 Door Ajar RR Circuit Short To Ground
B1339 Chime Input Request Circuit Short To Battery
B1340 Chime Input Request Circuit Short To Ground
B1341 Power Door Unlock Circuit Short To Ground
B1342 ECU Is Defective
B1343 Heated Backlite Input Circuit Failure
B1344 Heated Backlite Input Circuit Open
B1345 Heated Backlite Input Circuit Short To Ground
B1346 Heated Backlite Input Circuit Short To Battery
B1347 Heated Backlite Relay Circuit Failure
B1348 Heated Backlite Relay Circuit Open
B1349 Heated Backlite Relay Short To Battery
B1350 Heated Backlite Relay Short To Ground
B1351 Ignition Key-In Circuit Short To Battery
B1352 Ignition Key-In Circuit Failure
B1353 Ignition Key-In Circuit Open
B1354 Ignition Key-In Circuit Short To Ground
B1355 Ignition Run Circuit Failure
B1356 Ignition Run Circuit Open
B1357 Ignition Run Circuit Short To Battery
B1358 Ignition Run Circuit Short To Ground
B1359 Ignition Run/Acc Circuit Failure
B1360 Ignition Run/Acc Circuit Open
B1361 Ignition Run/Acc Circuit Short To Battery

B1362 Ignition Run/Acc Circuit Short To Ground
B1363 Ignition Start Circuit Failure
B1364 Ignition Start Circuit Open
B1365 Ignition Start Circuit Short To Battery
B1366 Ignition Start Circuit Short To Ground
B1367 Ignition Tach Circuit Failure
B1368 Ignition Tach Circuit Open
B1369 Ignition Tach Circuit Short To Battery
B1370 Ignition Tach Circuit Short To Ground
B1371 Illuminated Entry Relay Circuit Failure
B1372 Illuminated Entry Relay Circuit Open
B1373 Illuminated Entry Relay Short To Battery
B1374 Illuminated Entry Relay Short To Ground
B1375 Oil Change Lamp Circuit Open
B1376 Oil Change Lamp Circuit Short To Battery
B1377 Oil Change Lamp Circuit Failure
B1378 Oil Change Lamp Circuit Short To Ground
B1379 Oil Change Reset Button Circuit Short To Ground
B1380 Oil Change Reset Button Circuit Failure
B1381 Oil Change Reset Button Circuit Open
B1382 Oil Change Reset Button Circuit Short To Battery
B1383 Oil Level Lamp Circuit Short To Battery
B1384 Oil Level Lamp Circuit Failure
B1385 Oil Level Lamp Circuit Open
B1386 Oil Level Lamp Circuit Short To Ground
B1387 Oil Temperature Sensor Circuit Open
B1388 Oil Temperature Sensor Circuit Short To Battery
B1389 Oil Temperature Sensor Circuit Failure
B1390 Oil Temperature Sensor Circuit Short To Ground
B1391 Oil Level Switch Circuit Failure
B1392 Power Door Memory Lock Relay Circuit Failure
B1393 Power Door Memory Lock Relay Circuit Open
B1394 Power Door Memory Lock Relay Circuit Short To Battery
B1395 Power Door Memory Lock Relay Circuit Short To Ground
B1396 Power Door Lock Circuit Short To Battery
B1397 Power Door Unlock Circuit Short To Battery
B1398 Driver Power Window One Touch Window Relay Circuit Failure
B1399 Driver Power Window One Touch Window Relay Circuit Open
B1400 Driver Power Window One Touch Window Relay Circuit Short To Battery
B1401 Driver Power Window One Touch Window Relay Circuit Short To Ground
B1402 Driver Power Window Down Switch Circuit Failure
B1403 Driver Power Window Up Switch Circuit Failure
B1404 Driver Power Window Down Circuit Open
B1405 Driver Power Window Down Circuit Short To Battery
B1406 Driver Power Window Down Circuit Short To Ground
B1407 Driver Power Window Up Circuit Open
B1408 Driver Power Window Up Circuit Short To Battery
B1409 Driver Power Window Up Circuit Short To Ground
B1410 Driver Power Window Motor Circuit Failure
B1411 Driver Power Window Motor Circuit Open
B1412 Driver Power Window Motor Circuit Short To Battery
B1413 Driver Power Window Motor Circuit Short To Ground
B1414 Power Window LR Motor Circuit Failure
B1415 Power Window LR Motor Circuit Open
B1416 Power Window LR Motor Circuit Short To Battery
B1417 Power Window LR Motor Circuit Short To Ground

B1418 Passenger Power Window Motor Circuit Failure
B1419 Passenger Power Window Motor Circuit Open
B1420 Passenger Power Window Motor Circuit Short To Battery
B1421 Passenger Power Window Motor Circuit Short To Ground
B1422 Power Window RR Motor Circuit Failure
B1423 Power Window RR Motor Circuit Open
B1424 Power Window RR Motor Circuit Short To Battery
B1425 Power Window RR Motor Circuit Short To Ground
B1426 Lamp Seat Belt Circuit Short To Battery
B1427 Lamp Seat Belt Circuit Open
B1428 Lamp Seat Belt Circuit Failure
B1429 Lamp Seat Belt Circuit Short To Ground
B1430 Seat Belt Switch Circuit Short To Ground
B1431 Wiper Brake/Run Relay Circuit Failure
B1432 Wiper Brake/Run Relay Circuit Short To Battery
B1433 Wiper Brake/Run Relay Circuit Short To Ground
B1434 Wiper Hi/Low Speed Relay Coil Circuit Failure
B1435 Wiper Hi/Low Speed Relay Coil Circuit Open
B1436 Wiper Hi/Low Speed Relay Coil Circuit Short To Battery
B1437 Wiper Hi/Low Speed Relay Coil Circuit Short To Ground
B1438 Wiper Mode Select Switch Circuit Failure
B1439 Wiper Mode Select Switch Circuit Open
B1440 Wiper Mode Select Switch Circuit Short To Battery
B1441 Wiper Mode Select Switch Circuit Short To Ground
B1442 Door Handle Switch Circuit Failure
B1443 Door Handle Switch Circuit Open
B1444 Door Handle Switch Circuit Short To Battery
B1445 Door Handle Switch Circuit Short To Ground
B1446 Wiper Park Sense Circuit Failure
B1447 Wiper Park Sense Circuit Open
B1448 Wiper Park Sense Circuit Short To Battery
B1449 Wiper Park Sense Circuit Short To Ground
B1450 Wiper Wash/Delay Switch Circuit Failure
B1451 Wiper Wash/Delay Switch Circuit Open
B1452 Wiper Wash/Delay Switch Circuit Short To Battery
B1453 Wiper Wash/Delay Switch Circuit Short To Ground
B1454 Wiper Washer Fluid Lamp Circuit Failure
B1455 Wiper Washer Fluid Lamp Circuit Open
B1456 Wiper Washer Fluid Lamp Circuit Short To Battery
B1457 Wiper Washer Fluid Lamp Circuit Short To Ground
B1458 Wiper Washer Pump Motor Relay Circuit Failure
B1459 Wiper Washer Pump Motor Relay Coil Circuit Open
B1460 Wiper Washer Pump Motor Relay Coil Circuit Short To Battery
B1461 Wiper Washer Pump Motor Relay Coil Circuit Short To Ground
B1462 Seat Belt Switch Circuit Failure
B1463 Seat Belt Switch Circuit Open
B1464 Seat Belt Switch Circuit Short To Battery
B1465 Wiper Brake/Run Relay Circuit Open
B1466 Wiper Hi/Low Speed Not Switching
B1467 Wiper Hi/Low Speed Circuit Motor Short To Battery
B1468 Chime Input Request Circuit Failure
B1469 Chime Input Request Circuit Open
B1470 Lamp Headlamp Input Circuit Failure
B1471 Lamp Headlamp Input Circuit Open
B1472 Lamp Headlamp Input Circuit Short To Ground
B1473 Wiper Low Speed Circuit Motor Failure

B1474 Battery Saver Power Relay Circuit Short To Battery
B1475 Accessory Delay Relay Contact Short To Battery
B1476 Wiper High Speed Circuit Motor Failure
B1477 Wiper Hi/Low Circuit Motor Short To Ground
B1478 Power Window One Touch Up/Down Activated Simultaneously
B1479 Wiper Washer Fluid Level Sensor Circuit Failure
B1480 Wiper Washer Fluid Level Sensor Circuit Open
B1481 Wiper Washer Fluid Level Sensor Circuit Short To Battery
B1482 Wiper Washer Fluid Level Sensor Circuit Short To Ground
B1483 Brake Pedal Input Circuit Failure
B1484 Brake Pedal Input Open Circuit
B1485 Brake Pedal Input Circuit Battery Short
B1486 Brake Pedal Input Circuit Ground Short
B1487 Door Handle Right Front Circuit Failure
B1488 Door Handle Right Front Circuit Open
B1489 Door Handle Right Front Short To Battery
B1490 Door Handle Right Front Short To Ground
B1491 Ignition Cylinder Sensor Circuit Failure
B1492 Ignition Cylinder Sensor Open Circuit
B1493 Ignition Cylinder Sensor Battery Short
B1494 Ignition Cylinder Sensor Ground Short
B1495 Decklid Punch-Out Sensor Circuit Failure
B1496 Decklid Punch-Out Sensor Open Circuit
B1497 Decklid Punch-Out Sensor Battery Short
B1498 Decklid Punch-Out Sensor Ground Short
B1499 Lamp Turn Signal Left Circuit Failure
B1500 Lamp Turn Signal Left Circuit Open
B1501 Lamp Turn Signal Left Circuit Short To Battery
B1502 Lamp Turn Signal Left Circuit Short To Ground
B1503 Lamp Turn Signal Right Circuit Failure
B1504 Lamp Turn Signal Right Circuit Open
B1505 Lamp Turn Signal Right Circuit Short To Battery
B1506 Lamp Turn Signal Right Circuit Short To Ground
B1507 Flash To Pass Switch Circuit Failure
B1508 Flash To Pass Switch Circuit Open
B1509 Flash To Pass Switch Circuit Short To Battery
B1510 Flash To Pass Switch Circuit Short To Ground
B1511 Driver Door Handle Circuit Failure
B1512 Driver Door Handle Circuit Open
B1513 Driver Door Handle Circuit Short To Battery
B1514 Driver Door Handle Circuit Short To Ground
B1515 Seat Driver Occupied Switch Circuit Failure
B1516 Seat Driver Occupied Switch Circuit Open
B1517 Seat Driver Occupied Switch Circuit Short To Battery
B1518 Seat Driver Occupied Switch Circuit Short To Ground
B1519 Hood Switch Circuit Failure
B1520 Hood Switch Circuit Open
B1521 Hood Switch Circuit Short To Battery
B1522 Hood Switch Circuit Short To Ground
B1523 Keyless Entry Circuit Failure
B1524 Keyless Entry Circuit Open
B1525 Keyless Entry Circuit Short To Battery
B1526 Keyless Entry Circuit Short To Ground
B1527 Memory Set Switch Circuit Failure
B1528 Memory Set Switch Circuit Open
B1529 Memory Set Switch Circuit Short To Battery

B1530 Memory Set Switch Circuit Short To Ground
B1531 Memory 1 Switch Circuit Failure
B1532 Memory 1 Switch Circuit Open
B1533 Memory 1 Switch Circuit Short To Battery
B1534 Memory 1 Switch Circuit Short To Ground
B1535 Memory 2 Switch Circuit Failure
B1536 Memory 2 Switch Circuit Open
B1537 Memory 2 Switch Circuit Short To Battery
B1538 Memory 2 Switch Circuit Short To Ground
B1539 Mirror Driver Switch Assembly Circuit Failure
B1540 Mirror Driver Switch Assembly Circuit Open
B1541 Mirror Driver Switch Assembly Circuit Short To Battery
B1542 Mirror Driver Switch Assembly Circuit Short To Ground
B1543 Seat Direction Switch Assembly Circuit Failure
B1544 Seat Direction Switch Assembly Circuit Open
B1545 Seat Direction Switch Assembly Circuit Short To Battery
B1546 Seat Direction Switch Assembly Circuit Short To Ground
B1547 Power Window Master Circuit Failure
B1548 Power Window Master Circuit Open
B1549 Power Window Master Circuit Short To Battery
B1550 Power Window Master Circuit Short To Ground
B1551 Decklid Release Circuit Failure
B1552 Decklid Release Circuit Open
B1553 Decklid Release Circuit Short To Battery
B1554 Decklid Release Circuit Short To Ground
B1555 Ignition Run/Start Circuit Failure
B1556 Ignition Run/Start Circuit Open
B1557 Ignition Run/Start Circuit Short To Battery
B1558 Ignition Run/Start Circuit Short To Ground
B1559 Door Lock Cylinder Circuit Failure
B1560 Door Lock Cylinder Circuit Open
B1561 Door Lock Cylinder Circuit Short To Battery
B1562 Door Lock Cylinder Circuit Short To Ground
B1563 Door Ajar Circuit Failure
B1564 Door Ajar Circuit Open
B1565 Door Ajar Circuit Short To Battery
B1566 Door Ajar Circuit Short To Ground
B1567 Lamp Headlamp High-Beam Circuit Failure
B1568 Lamp Headlamp High-Beam Circuit Open
B1569 Lamp Headlamp High-Beam Circuit Short To Battery
B1570 Lamp Headlamp High-Beam Circuit Short To Ground
B1571 Door Ajar LR Circuit Failure
B1572 Door Ajar LR Circuit Open
B1573 Door Ajar LR Circuit Short To Battery
B1574 Door Ajar LR Circuit Short To Ground
B1575 Lamp Park Input Circuit Failure
B1576 Lamp Park Input Circuit Open
B1577 Lamp Park Input Circuit Short To Battery
B1578 Lamp Park Input Circuit Short To Ground
B1579 Dim Panel Increase Input Circuit Failure
B1580 Dim Panel Increase Input Circuit Open
B1581 Dim Panel Increase Input Circuit Short To Battery
B1582 Dim Panel Increase Input Circuit Short To Ground
B1583 Dim Panel Decrease Input Circuit Failure
B1584 Dim Panel Decrease Input Circuit Open
B1585 Dim Panel Decrease Input Circuit Short To Battery

B1586 Dim Panel Decrease Input Circuit Short To Ground
B1587 Autolamp Delay Increase Circuit Failure
B1588 Autolamp Delay Increase Circuit Open
B1589 Autolamp Delay Increase Circuit Short To Battery
B1590 Autolamp Delay Increase Circuit Short To Ground
B1591 Autolamp Delay Decrease Circuit Failure
B1592 Autolamp Delay Decrease Circuit Open
B1593 Autolamp Delay Decrease Circuit Short To Battery
B1594 Autolamp Delay Decrease Circuit Short To Ground
B1595 Ignition Switch Illegal Input Code
B1596 Service Continuous Codes
B1597 Driver's Seat Seatback Autoglide Forward Switch Circuit Short to Ground
B1598 Driver's Seat Seatback Autoglide Rearward Switch Circuit Short to Ground
B1599 Passenger's Seatback Autoglide Forward Switch Circuit Short to Ground
B1600 PATS Ignition Key Transponder Signal Is Not Received
B1601 PATS Received Incorrect Key-Code From Ignition Key Transponder
B1602 PATS Received Invalid Format Of Key-Code From Ignition Key Transponder
B1603 Lamp Anti-Theft Indicator Circuit Failure
B1604 Lamp Anti-Theft Indicator Circuit Open
B1605 Lamp Anti-Theft Indicator Circuit Short To Battery
B1606 Lamp Anti-Theft Indicator Circuit Short To Ground
B1607 Illuminated Entry Input Circuit Failure
B1608 Illuminated Entry Input Open Circuit
B1609 Illuminated Entry Input Short Circuit To Battery
B1610 Illuminated Entry Input Short Circuit To Ground
B1611 Wiper Rear Mode Select Switch Circuit Failure
B1612 Wiper Rear Mode Select Switch Circuit Open
B1613 Wiper Rear Mode Select Switch Circuit Short To Battery
B1614 Wiper Rear Mode Select Switch Circuit Short To Ground
B1615 Wiper Rear Disable Switch Circuit Failure
B1616 Wiper Rear Disable Switch Circuit Open
B1617 Wiper Rear Disable Switch Circuit Short To Battery
B1618 Wiper Rear Disable Switch Circuit Short To Ground
B1619 Wiper Rear Low Limit Input Circuit Failure
B1620 Wiper Rear Low Limit Input Circuit Open
B1621 Wiper Rear Low Limit Input Circuit Short To Battery
B1622 Wiper Rear Low Limit Input Circuit Short To Ground
B1623 Lamp Keypad Output Circuit Failure
B1624 Lamp Keypad Output Open Circuit
B1625 Lamp Keypad Output Short Circuit To Battery
B1626 Lamp Keypad Output Short Circuit To Ground
B1627 PRNDL Reverse Input Circuit Failure
B1628 PRNDL Reverse Input Open Circuit
B1629 PRNDL Reverse Input Short To Battery
B1630 PRNDL Reverse Input Short Circuit To Ground
B1631 Mirror Driver Left Circuit Failure
B1632 Mirror Driver Left Circuit Open
B1633 Mirror Driver Left Circuit Short To Battery
B1634 Mirror Driver Left Circuit Short To Ground
B1635 Mirror Driver Right Circuit Failure
B1636 Mirror Driver Right Circuit Open
B1637 Mirror Driver Right Circuit Short To Battery
B1638 Mirror Driver Right Short To Ground
B1639 Mirror Passenger Left Circuit Failure
B1640 Mirror Passenger Left Circuit Open
B1641 Mirror Passenger Left Circuit Short To Battery

B1642 Mirror Passenger Left Circuit Short To Ground
B1643 Mirror Passenger Right Circuit Failure
B1644 Mirror Passenger Right Circuit Open
B1645 Mirror Passenger Right Circuit Short To Battery
B1646 Mirror Passenger Right Circuit Short To Ground
B1647 Seat Driver Recline Forward Circuit Failure
B1648 Seat Driver Recline Forward Circuit Open
B1649 Seat Driver Recline Forward Circuit Short To Battery
B1650 Seat Driver Recline Forward Circuit Short To Ground
B1651 Seat Driver Recline Backward Circuit Failure
B1652 Seat Driver Recline Backward Circuit Open
B1653 Seat Driver Recline Backward Circuit Short To Battery
B1654 Seat Driver Recline Backward Circuit Short To Ground
B1655 Seat Driver Rear Up Circuit Failure
B1656 Seat Driver Rear Up Circuit Open
B1657 Seat Driver Rear Up Circuit Short To Battery
B1658 Seat Driver Rear Up Circuit Short To Ground
B1659 Seat Driver Front Up Circuit Failure
B1660 Seat Driver Front Up Circuit Open
B1661 Seat Driver Front Up Circuit Short To Battery
B1662 Seat Driver Front Up Circuit Short To Ground
B1663 Seat Driver Front Up/Down Motor Stalled
B1664 Seat Driver Rear Up/Down Motor Stalled
B1665 Seat Driver Forward/Backward Motor Stalled
B1666 Seat Driver Recline Motor Stalled
B1667 Mirror Driver Up/Down Motor Stalled
B1668 Mirror Driver Right/Left Motor Stalled
B1669 Mirror Passenger Up/Down Motor Stalled
B1670 Mirror Passenger Right/Left Motor Stalled
B1671 Battery Module Voltage Out Of Range
B1672 Seat Driver Occupied Input Circuit Failure
B1673 Seat Driver Occupied Input Circuit Open
B1674 Seat Driver Occupied Input Circuit Short To Battery
B1675 Seat Driver Occupied Input Circuit Short To Ground
B1676 Battery Pack Voltage Out Of Range
B1677 Alarm Panic Input Circuit Failure
B1678 Alarm Panic Input Circuit Open
B1679 Alarm Panic Input Circuit Short To Battery
B1680 Alarm Panic Input Circuit Short To Ground
B1681 PATS Transceiver Module Signal Is Not Received
B1682 PATS Is Disabled (Check Link Between PATS And Transponder)
B1683 Mirror Driver/Passenger Switch Circuit Failure
B1684 Mirror Driver/Passenger Switch Circuit Open
B1685 Lamp Dome Input Circuit Failure
B1686 Lamp Dome Input Circuit Open
B1687 Lamp Dome Input Circuit Short To Battery
B1688 Lamp Dome Input Circuit Short To Ground
B1689 Autolamp Delay Circuit Failure
B1690 Autolamp Delay Circuit Open
B1691 Autolamp Delay Circuit Short To Battery
B1692 Autolamp Delay Circuit Short To Ground
B1693 Autolamp On Circuit Failure
B1694 Autolamp On Circuit Open
B1695 Autolamp On Circuit Short To Battery
B1696 Autolamp On Circuit Short To Ground
B1697 Mirror Driver/Passenger Switch Circuit Short To Battery

B1698 Mirror Driver/Passenger Switch Circuit Short To Ground
B1699 Passenger's Seat Occupied Switch Circuit Short to Ground
B1700 Passenger's Seatbelt Tension Reducer Circuit Short to Ground
B1701 Seat Driver Recline Forward Switch Circuit Failure
B1702 Seat Driver Recline Forward Switch Circuit Open
B1703 Seat Driver Recline Forward Switch Circuit Short To Battery
B1704 Seat Driver Recline Forward Switch Circuit Short To Ground
B1705 Seat Driver Recline Rearward Switch Circuit Failure
B1706 Seat Driver Recline Rearward Switch Circuit Open
B1707 Seat Driver Recline Rearward Switch Circuit Short To Battery
B1708 Seat Driver Recline Rearward Switch Circuit Short To Ground
B1709 Seat Driver Front Up Switch Circuit Failure
B1710 Seat Driver Front Up Switch Circuit Open
B1711 Seat Driver Front Up Switch Circuit Short To Battery
B1712 Seat Driver Front Up Switch Circuit Short To Ground
B1713 Seat Driver Front Down Switch Circuit Failure
B1714 Seat Driver Front Down Switch Circuit Open
B1715 Seat Driver Front Down Switch Circuit Short To Battery
B1716 Seat Driver Front Down Switch Circuit Short To Ground
B1717 Seat Driver Forward Switch Circuit Failure
B1718 Seat Driver Forward Switch Circuit Open
B1719 Seat Driver Forward Switch Circuit Short To Battery
B1720 Seat Driver Forward Switch Circuit Short To Ground
B1721 Seat Driver Rearward Switch Circuit Failure
B1722 Seat Driver Rearward Switch Circuit Open
B1723 Seat Driver Rearward Switch Circuit Short To Battery
B1724 Seat Driver Rearward Switch Circuit Short To Ground
B1725 Seat Driver Rear Up Switch Circuit Failure
B1726 Seat Driver Rear Up Switch Circuit Open
B1727 Seat Driver Rear Up Switch Circuit Short To Battery
B1728 Seat Driver Rear Up Switch Circuit Short To Ground
B1729 Seat Driver Rear Down Switch Circuit Failure
B1730 Seat Driver Rear Down Switch Circuit Open
B1731 Seat Driver Rear Down Switch Circuit Short To Battery
B1732 Seat Driver Rear Down Switch Circuit Short To Ground
B1733 Mirror Driver Vertical Switch Circuit Failure
B1734 Mirror Driver Vertical Switch Circuit Open
B1735 Mirror Driver Vertical Switch Circuit Short To Battery
B1736 Mirror Driver Vertical Switch Circuit Short To Ground
B1737 Mirror Driver Horizontal Switch Circuit Failure
B1738 Mirror Driver Horizontal Switch Circuit Open
B1739 Mirror Driver Horizontal Switch Circuit Short To Battery
B1740 Mirror Driver Horizontal Switch Circuit Short To Ground
B1741 Mirror Passenger Vertical Switch Circuit Failure
B1742 Mirror Passenger Vertical Switch Circuit Open
B1743 Mirror Passenger Vertical Switch Circuit Short To Battery
B1744 Mirror Passenger Vertical Switch Circuit Short To Ground
B1745 Mirror Passenger Horizontal Switch Circuit Failure
B1746 Mirror Passenger Horizontal Switch Circuit Open
B1747 Mirror Passenger Horizontal Switch Circuit Short To Battery
B1748 Mirror Passenger Horizontal Switch Circuit Short To Ground
B1749 Park/Neutral Switch Circuit Failure
B1750 Park/Neutral Switch Circuit Open
B1751 Park/Neutral Switch Circuit Short To Battery
B1752 Park/Neutral Switch Circuit Short To Ground
B1753 Hazard Flash Output Circuit Failure

B1754 Hazard Flash Output Circuit Open
B1755 Hazard Flash Output Circuit Short Battery
B1756 Hazard Flash Output Circuit Short To Ground
B1757 Seat Driver Rear Down Circuit Failure
B1758 Seat Driver Rear Down Circuit Open
B1759 Seat Driver Rear Down Circuit Short To Battery
B1760 Seat Driver Rear Down Circuit Short To Ground
B1761 Seat Driver Front Down Circuit Failure
B1762 Seat Driver Front Down Circuit Open
B1763 Seat Driver Front Down Circuit Short To Battery
B1764 Seat Driver Front Down Circuit Short To Ground
B1765 Seat Driver Forward Circuit Failure
B1766 Seat Driver Forward Circuit Open
B1767 Seat Driver Forward Circuit Short To Battery
B1768 Seat Driver Forward Circuit Short To Ground
B1769 Seat Driver Backward Circuit Failure
B1770 Seat Driver Backward Circuit Open
B1771 Seat Driver Backward Circuit Short To Battery
B1772 Seat Driver Backward Circuit Short To Ground
B1773 Mirror Driver Up Circuit Failure
B1774 Mirror Driver Up Circuit Open
B1775 Mirror Driver Up Circuit Short To Battery
B1776 Mirror Driver Up Circuit Short To Ground
B1777 Driver's Seatbelt Tension Reducer Circuit Short to Ground
B1778 Mirror Driver Down Circuit Failure
B1779 Mirror Driver Down Circuit Open
B1780 Mirror Driver Down Circuit Short To Battery
B1781 Mirror Driver Down Short To Ground
B1782 Mirror Passenger Up Circuit Failure
B1783 Mirror Passenger Up Circuit Open
B1784 Mirror Passenger Up Circuit Short To Battery
B1785 Mirror Passenger Up Circuit Short To Ground
B1786 Mirror Passenger Down Circuit Failure
B1787 Mirror Passenger Down Circuit Open
B1788 Mirror Passenger Down Circuit Short To Battery
B1789 Mirror Passenger Down Circuit Short To Ground
B1790 Autolamp Sensor Input Circuit Failure
B1791 Autolamp Sensor Input Circuit Open
B1792 Autolamp Sensor Input Circuit Short To Battery
B1793 Autolamp Sensor Input Circuit Short To Ground
B1794 Lamp Headlamp Low-Beam Circuit Failure
B1795 Lamp Headlamp Low-Beam Circuit Open
B1796 Lamp Headlamp Low-Beam Circuit Short To Battery
B1797 Lamp Headlamp Low-Beam Circuit Short To Ground
B1798 Lamp Turn Signal Front Output Circuit Failure
B1799 Lamp Turn Signal Front Output Circuit Open
B1800 Lamp Turn Signal Front Output Circuit Short To Battery
B1801 Lamp Turn Signal Front Output Circuit Short To Ground
B1802 Lamp Turn Signal Rear Output Circuit Failure
B1803 Lamp Turn Signal Rear Output Circuit Open
B1804 Lamp Turn Signal Rear Output Circuit Short To Battery
B1805 Lamp Turn Signal Rear Output Circuit Short To Ground
B1806 Lamp Tail Output Circuit Failure
B1807 Lamp Tail Output Circuit Open
B1808 Lamp Tail Output Circuit Short To Battery
B1809 Lamp Tail Output Circuit Short To Ground

- B1810** Lamp Backup Switch Input Circuit Failure
- B1811** Lamp Backup Switch Input Circuit Open
- B1812** Lamp Backup Switch Input Circuit Short To Battery
- B1813** Lamp Backup Switch Input Circuit Short To Ground
- B1814** Wiper Rear Motor Down Relay Coil Circuit Failure
- B1815** Wiper Rear Motor Down Relay Coil Circuit Open
- B1816** Wiper Rear Motor Down Relay Coil Circuit Short To Battery
- B1817** Wiper Rear Motor Down Relay Coil Circuit Short To Ground
- B1818** Wiper Rear Motor Up Relay Coil Circuit Failure
- B1819** Wiper Rear Motor Up Relay Coil Circuit Open
- B1820** Wiper Rear Motor Up Relay Coil Circuit Short To Battery
- B1821** Wiper Rear Motor Up Relay Coil Circuit Short To Ground
- B1822** Wiper Rear Park Sense Input Circuit Failure
- B1823** Wiper Rear Park Sense Input Circuit Open
- B1824** Wiper Rear Park Sense Input Circuit Short To Battery
- B1825** Wiper Rear Park Sense Input Circuit Short To Ground
- B1826** Wiper Rear High Limit Input Circuit Failure
- B1827** Wiper Rear High Limit Input Circuit Open
- B1828** Wiper Rear High Limit Input Circuit Short To Battery
- B1829** Wiper Rear High Limit Input Circuit Short To Ground
- B1830** Door Unlock Disarm Switch Circuit Failure
- B1831** Door Unlock Disarm Switch Circuit Open
- B1832** Door Unlock Disarm Switch Circuit Short To Battery
- B1833** Door Unlock Disarm Switch Circuit Short To Ground
- B1834** Door Unlock Disarm Output Circuit Failure
- B1835** Door Unlock Disarm Output Circuit Open
- B1836** Door Unlock Disarm Output Circuit Short To Battery
- B1837** Door Unlock Disarm Output Circuit Short To Ground
- B1838** Battery Saver Power Relay Circuit Failure
- B1839** Wiper Rear Motor Circuit Failure
- B1840** Wiper Front Power Circuit Failure
- B1841** Wiper Front Power Circuit Open
- B1842** Wiper Front Power Circuit Short To Battery
- B1843** Wiper Front Power Circuit Short To Ground
- B1844** Phone Handset Circuit Failure
- B1845** Ignition Tamper Circuit Failure
- B1846** Ignition Tamper Circuit Open
- B1847** Ignition Tamper Circuit Short To Battery
- B1848** Ignition Tamper Circuit Short To Ground
- B1849** Climate Control Temperature Differential Circuit Failure
- B1850** Climate Control Temperature Differential Circuit Open
- B1851** Climate Control Temperature Differential Circuit Short To Battery
- B1852** Climate Control Temperature Differential Circuit Short To Ground
- B1853** Climate Control Air Temperature Internal Sensor Motor Circuit Failure
- B1854** Climate Control Air Temperature Internal Sensor Motor Circuit Open
- B1855** Climate Control Air Temperature Internal Sensor Motor Circuit Short To Battery
- B1856** Climate Control Air Temperature Internal Sensor Motor Circuit Short To Ground
- B1857** Climate Control On/Off Switch Circuit Failure
- B1858** Climate Control A/C Pressure Switch Circuit Failure
- B1859** Climate Control A/C Pressure Switch Circuit Open
- B1860** Climate Control A/C Pressure Switch Circuit Short To Battery
- B1861** Climate Control A/C Pressure Switch Circuit Short To Ground
- B1862** Climate Control A/C Lock Sensor Failure
- B1863** Ground ECU Circuit Open
- B1864** Battery Power Supply ECU Circuit Failure
- B1865** Battery Power Supply ECU Circuit Open

B1866 Battery Power Supply ECU Circuit Short To Battery
B1867 Battery Power Supply ECU Circuit Short To Ground
B1868 Lamp Air Bag Warning Indicator Circuit Failure
B1869 Lamp Air Bag Warning Indicator Circuit Open
B1870 Lamp Air Bag Warning Indicator Circuit Short To Battery
B1871 Passenger Air Bag Disable Module Fault
B1872 Turn Signal / Hazard Power Feed Circuit Short To Battery
B1873 Turn Signal / Hazard Power Feed Circuit Short To Ground
B1874 Cellular Phone Handset Not Present
B1875 Turn Signal / Hazard Switch Signal Circuit Failure
B1876 Seatbelt Driver Pretensioner Circuit Failure
B1877 Seatbelt Driver Pretensioner Circuit Open
B1878 Seatbelt Driver Pretensioner Circuit Short to Battery
B1879 Seatbelt Driver Pretensioner Circuit Short to Ground
B1880 Seatbelt Passenger Pretensioner Circuit Failure
B1881 Seatbelt Passenger Pretensioner Circuit Open
B1882 Seatbelt Passenger Pretensioner Circuit Short to Battery
B1883 Seatbelt Passenger Pretensioner Circuit Short to Ground
B1884 PAD Warning Lamp Inoperative
B1885 Seatbelt Driver Pretensioner Circuit Resistance Low on Squib
B1886 Seatbelt Passenger Pretensioner Circuit Resistance Low on Squib
B1887 Air Bag Driver Circuit Resistance Low or Shorted Together
B1888 Air Bag Passenger Circuit Resistance Low or Shorted Together
B1889 Passenger Airbag Disable Module Sensor Obstructed
B1890 PAD Warning Lamp Circuit Short to Battery
B1891 Air Bag Tone Warning Indicator Circuit Short to Battery
B1892 Air Bag Tone Warning Indicator Circuit Failure
B1893 GPS Antenna Open Circuit
B1894 Wiper Rear Motor Speed Sense Circuit Failure
B1895 Driver's / Passenger's Door Ajar Output Circuit Failure
B1896 Driver's / Passenger's Door Ajar Output Circuit Short to Battery
B1897 Horn Switch Circuit Failure
B1898 Chime Input #2 Circuit Short to Ground
B1899 Microphone Input Signal Circuit Open
B1900 Driver Side Airbag Fault
B1901 Air Bag Crash Sensor #1 Feed/Return Circuit Short To Ground
B1902 Air Bag Crash Sensor #1 Ground Circuit Failure
B1903 Air Bag Crash Sensor #1 Ground Circuit Short To Battery
B1904 Air Bag Crash Sensor #2 Feed/Return Circuit Failure
B1905 Air Bag Crash Sensor #2 Feed/Return Circuit Short To Battery
B1906 Air Bag Crash Sensor #2 Feed/Return Circuit Short To Ground
B1907 Air Bag Crash Sensor #2 Ground Circuit Failure
B1908 Air Bag Crash Sensor #2 Ground Circuit Short To Battery
B1909 Air Bag Crash Sensor #2 Ground Circuit Short To Ground
B1910 Air Bag Diagnostic Monitor Ground Circuit Failure
B1911 Air Bag Diagnostic Monitor Ground Circuit Short To Battery
B1912 Air Bag Diagnostic Monitor Ground Circuit Short To Ground
B1913 Air Bag Driver/Passenger Circuit Short To Ground
B1914 Air Bag Crash Sensors #1 / #2 Circuit Short To Ground
B1915 Air Bag Driver Circuit Failure
B1916 Air Bag Driver Circuit Short To Battery
B1917 Air Bag Memory Clear Circuit Failure
B1918 Air Bag Memory Clear Circuit Open
B1919 Air Bag Memory Clear Circuit Short To Battery
B1920 Air Bag Passenger Circuit Failure
B1921 Air Bag Diagnostic Monitor Ground Circuit Open

B1922 Air Bag Safing Sensor Output Circuit Short To Battery
B1923 Air Bag Memory Clear Circuit Short To Ground
B1924 Air Bag Internal Diagnostic Monitor Fault or System Disarm Fault
B1925 Air Bag Passenger Circuit Short To Battery
B1926 Air Bag Passenger Pressure Switch Circuit Failure
B1927 Passenger Side Airbag Fault
B1928 Air Bag Safing Sensor Output Circuit Failure
B1929 Air Bag Safing Sensor Output Circuit Open
B1930 Air Bag Safing Sensor Output Circuit Short To Ground
B1931 Air Bag Crash Sensor #1 Feed/Return Circuit Failure
B1932 Air Bag Driver Circuit Open
B1933 Air Bag Passenger Circuit Open
B1934 Air Bag Driver Inflator Circuit Resistance Low on Squib
B1935 Air Bag Passenger Inflator Circuit Resistance Low on Squib
B1936 Air Bag Driver Circuit Short To Ground
B1937 Air Bag Passenger Pressure Switch Circuit Open
B1938 Air Bag Passenger Circuit Short To Ground
B1939 Air Bag Passenger Pressure Switch Circuit Short To Ground
B1941 Air Bag Crash Sensor #1 Feed/Return Circuit Open
B1942 Air Bag Crash Sensor #2 Feed/Return Circuit Open
B1943 Air Bag Crash Sensor #1 Ground Circuit Short To Ground
B1944 Air Bag Crash Sensor #1 Ground Circuit Open
B1945 Air Bag Crash Sensor #2 Ground Circuit Open
B1946 Climate Control A/C Post Evaporator Sensor Circuit Failure
B1947 Climate Control A/C Post Evaporator Sensor Circuit Short To Ground
B1948 Climate Control Water Temperature Sensor Circuit Failure
B1949 Climate Control Water Temperature Sensor Circuit Short To Ground
B1950 Seat Rear Up/Down Potentiometer Feedback Circuit Failure
B1951 Seat Rear Up/Down Potentiometer Feedback Circuit Open
B1952 Seat Rear Up/Down Potentiometer Feedback Circuit Short To Battery
B1953 Seat Rear Up/Down Potentiometer Feedback Circuit Short To Ground
B1954 Seat Front Up/Down Potentiometer Feedback Circuit Failure
B1955 Seat Front Up/Down Potentiometer Feedback Circuit Open
B1956 Seat Front Up/Down Potentiometer Feedback Circuit Short To Battery
B1957 Seat Front Up/Down Potentiometer Feedback Circuit Short To Ground
B1958 Seat Recline Forward/Backward Potentiometer Feedback Circuit Failure
B1959 Seat Recline Forward/Backward Potentiometer Feedback Circuit Open
B1960 Seat Recline Forward/Backward Potentiometer Feedback Circuit Short To Battery
B1961 Seat Recline Forward/Backward Potentiometer Feedback Circuit Short To Ground
B1962 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Failure
B1963 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Open
B1964 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Short To Battery
B1965 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Short To Ground
B1966 A/C Post Heater Sensor Circuit Failure
B1967 A/C Post Heater Sensor Circuit Short To Ground
B1968 A/C Water Pump Detection Circuit Failure
B1969 A/C Clutch Magnetic Control Circuit Failure
B1970 Passenger Seatback Forward Switch Circuit Short to Ground
B1971 Passenger Seatback Rearward Switch Circuit Short to Ground
B1972 Passenger Rear Seat Up Switch Circuit Short to Battery
B1973 Passenger Rear Seat Down Switch Circuit Short to Battery
B1974 Passenger's Seat Recline Forward Switch Circuit Short to Battery
B1975 Passenger's Seat Recline Back Switch Circuit Short to Battery
B1976 Passenger's Seat Forward Switch Circuit Short to Battery
B1977 Passenger's Front Seat Up Switch Circuit Short to Battery
B1978 Passenger's Front Seat Down Switch Circuit Short to Battery

B1979 Passenger Seat Rearward Switch Circuit Short to Battery
B1980 Bulb - Outage Condition Detected
B1981 Memory Off Switch Circuit Short to Battery
B1982 Driver's Door Unlock Relay Circuit Failure
B1983 Driver's Door Unlock Relay Circuit Short to Battery
B1984 Seat Switch Lumbar Inflate Circuit Failure
B1985 Seat Switch Lumbar Deflate Circuit Failure
B1986 Driver's Seat Seatback Autoglide Rearward Switch Circuit Failure
B1987 Pedal Forward / Rearward Motor Stalled
B1988 Pedal Position Forward Switch Circuit Short to Battery
B1989 Pedal Position Rearward Switch Circuit Short to Battery
B1990 Pedal Forward / Rearward Potentiometer Feedback Circuit Failure
B1991 Pedal Forward / Rearward Potentiometer Feedback Circuit Short to Battery
B1992 Driver Side, Side mount Airbag Circuit Short to Vbatt
B1993 Driver Side, Side mount Airbag Circuit Short to Ground
B1994 Driver Side, Side mount Airbag Circuit Open
B1995 Driver Side, Side mount Airbag Low resistance on Squib
B1996 Passenger Side, Side mount Airbag Circuit Short to Vbatt
B1997 Passenger Side, Side mount Airbag Circuit Short to Ground
B1998 Passenger Side, Side mount Airbag Circuit Open
B1999 Passenger Side, Side mount Airbag Low resistance on Squib
B2100 Door Driver Key Cylinder Switch Failure
B2101 Head Rest Switch Circuit Failure
B2102 Antenna Circuit Short to Ground
B2103 Antenna Not Connected
B2104 Door Passenger Key Cylinder Switch Failure
B2105 Throttle Position Input Out of Range Low
B2106 Throttle Position Input Out of Range High
B2107 Front Wiper Motor Relay Circuit Short to Vbatt
B2108 Trunk Key Cylinder Switch Failure
B2109 Heated Wind Shield Relay Short to Vbatt (changed from Failure 2/6/97)
B2110 Front Wiper Motor Relay Circuit Open (changed from Failure 2/6/97)
B2111 All Door Lock Input Short to Ground
B2112 Door Driver Set Switch Stuck Failure
B2113 Heated Windshield Input Short to Ground
B2114 Front Washer Input Short to Ground
B2115 Rear Washer Input Short to Ground
B2116 Door Driver Reset Switch Stuck Failure
B2117 Driver Side, Side mount Airbag Low capacitance on Squib
B2118 Passenger Side, Side mount Airbag Low capacitance on Squib
B2119 Compressor Failure
B2120 Door Passenger Set Switch Stuck Failure
B2122 Driver Side Satellite Communication Circuit Short to Ground
B2123 Passenger Side Satellite Communication Circuit Short to Ground
B2124 Door Passenger Reset Switch Stuck Failure
B2128 Central Lock Motor Failure
B2129 Central Lock Feedback Failure
B2130 Double Lock Timeout Failure
B2131 Double Lock Feedback Failure
B2132 Dimmer switch Circuit Short to Gnd
B2133 Brake Motor Warning lamp Circuit Failure
B2134 Brake Motor Warning lamp Circuit Short to Vbatt
B2135 Park Brake Applied Warning Lamp Circuit Failure
B2136 Park Brake Applied Warning Lamp Circuit Short To Battery
B2139 Data Mismatch (receive data does not match what was expected)
B2141 NVM Configuration Failure

B2142 NVM TIC Failure
B2143 NVM Memory Failure
B2144 NVM Alarm Data Failure
B2145 NVM RF HR Failure
B2146 Seat Recline Motor Position Out of Range
B2148 PWM Input Circuit Failure
B2149 Seat Front Vertical Motor Position Out of Range
B2150 Power Supply #1 Circuit Short to Ground
B2151 Power Supply #2 Circuit Short to Ground
B2152 Seat Rear Vertical Motor Position Out of Range
B2153 Rear Echo Sensor Circuit Failure
B2154 Front Echo Sensor Circuit Failure
B2155 Seat Horizontal Motor Position Out of Range
B2156 Rear Doppler Sensor Circuit Failure
B2157 Front Doppler Sensor Circuit Failure
B2158 Seat Recline Motor Memory Position Out of Range
B2159 Memory #1 output Short to Ground
B2160 Memory #1 output Short to VBatt
B2161 Seat Front Vertical Motor Memory Position Out of Range
B2162 Data Mismatch #2 (receive data does not match what was expected)
B2163 Clutch Position Fault
B2164 Seat Rear Vertical Motor Memory Position Out of Range
B2165 Gear shift position Fault
B2166 Gear select position Fault
B2167 Seat Horizontal Motor Memory Position Out of Range
B2168 Unable to confirm Unlock Condition
B2169 Unable to confirm lock Condition
B2170 Steering Column Lock Switch Circuit Failure
B2172 Inertia Switch input Circuit Open
B2174 Window Driver Rear Remote Up Switch Short to Battery
B2175 A/C Request Signal Circuit Short to Ground
B2176 Overdrive switch circuit short to Vbatt
B2177 Interior Scanning Sensor Circuit Failure
B2178 Window Driver Rear Remote Down Switch Short to Battery
B2179 Front Wiper Select Switch "A" Short to Ground
B2180 Front Wiper Select Switch "B" Short to Ground
B2181 Front Wiper Select Switch "C" Short to Ground
B2182 Window Passenger Front Remote Up Switch Short to Battery
B2183 Front Wiper Select Switch "H" Short to Ground
B2184 Front Wiper Select Switch "W" Short to Ground
B2185 Rear Wiper Select Switch "D" Short to Ground
B2186 Window Passenger Front Remote Down Switch Short to Battery
B2187 Rear Wiper Select Switch "B" Short to Ground
B2188 Rear Wiper Select Switch "E" Short to Ground
B2190 Window Passenger Rear Remote Up Switch Short to Battery
B2194 Window Passenger Rear Remote Down Switch Short to Battery
B2195 Driver Window Up / Down Power Circuit Short to Ground
B2196 Passenger Window Up / Down Power Circuit Short to Ground
B2197 TV Module Error
B2198 TrafficMaster Module Error
B2199 VICS Module Error
B2200 No Communication to TV Module (No Fitting of TV)
B2201 No Communication With Traffic MasterModule
B2202 No Communication to VICS Module (No Fitting of VICS)
B2203 CD-ROM Error
B2204 GPS Antenna Connection Open or Short

B2205 GPS Receiver Error
B2206 Gyroscope Error
B2207 ECU ROM Checksum Error
B2208 Communication Link to Display and Switch Module Error
B2209 Interior Lamp Override Switch Open Circuit
B2210 Interior Lamp Override Switch Short to Ground
B2211 Low Coolant Lamp Output Circuit Short to Battery
B2214 Window Passenger Front Up Switch Short to Battery
B2215 Window Passenger Front Down Switch Short to Battery
B2219 Window Driver Front Current Feedback Exceeded
B2220 Window Driver Rear Current Feedback Exceeded
B2221 Window Passenger Front Current Feedback Exceeded
B2222 Window Passenger Rear Current Feedback Exceeded
B2223 Mirror Driver Drive Circuit Failure
B2224 Mirror Passenger Drive Circuit Failure
B2225 Front Crash Sensor Mount Fault
B2226 Front Crash Sensor Internal Fault
B2227 Front Crash Sensor Driver Communications Fault
B2228 Air Bag Driver Circuit Short to Ground - Loop #2
B2229 Air Bag Passenger Circuit Short to Ground - Loop #2
B2230 Air Bag Driver Circuit Short to Battery - Loop #2
B2231 Air Bag Passenger Circuit Short to Battery - Loop #2
B2232 Air Bag Driver Circuit Open - Loop #2
B2233 Air Bag passenger Circuit Open - Loop #2
B2234 Air Bag Driver Inflator Circuit Resistance Low on Squib - Loop #2
B2235 Air Bag Passenger Inflator Circuit
B2236 Weak or Defected Electric Vehicle Battery Module Fault
B2237 Vehicle Signal indicating Park While VSS Present
B2238 Power Cable For Power Sliding Door Broken
B2239 Rear Cargo Door Set Switch Stuck (Short to Ground)
B2240 Rear Cargo Door Reset Switch Stuck (Short to Ground)
B2241 Rear Cargo Door Lock Circuit Short to Ground
B2242 Rear Cargo Door Unlock Circuit Open
B2243 Driver Rear Door Ajar Circuit Open
B2244 Driver Sliding Door Ajar Circuit Short to GND
B2245 Passenger Rear Door Ajar Circuit Open
B2246 Passenger Sliding Door Ajar Circuit Short to GND
B2247 EV Battery Pack Temperature Fault
B2248 Heated Windshield Relay Coil Circuit Failure
B2249 Head Lamp Relay Coil Short to Battery
B2250 All Doors Unlock Relay Circuit Failure
B2251 Parklamp Output Relay Driver Circuit Failure
B2252 Parklamp Output Relay Dirver Short to Battery
B2300 Seat Driver Memory Position Error
B2301 Seat Passenger Memory Position Error
B2302 Seat Headrest Feedback Potentiometer Circuit Failure
B2303 Seat Headrest Feedback Potentiometer Circuit Open
B2304 Seat Headrest Feedback Potentiometer Circuit Short to Battery
B2305 Seat Headrest Feedback Potentiometer Circuit Short to Ground
B2306 Seat Headrest Motor Stalled
B2310 Mirror Driver Memory Position Error
B2311 Mirror Passenger Memory Position Error
B2312 Mirror Passenger Horizontal Feedback Potentiometer Circuit Failure
B2313 Mirror Passenger Horizontal Feedback Potentiometer Circuit Open
B2314 Mirror Passenger Horizontal Feedback Potentiometer Circuit Short to Battery
B2315 Mirror Passenger Horizontal Feedback Potentiometer Circuit Short to Ground

B2316 Mirror Passenger Vertical Feedback Potentiometer Circuit Failure
B2317 Mirror Passenger Vertical Feedback Potentiometer Circuit Open
B2318 Mirror Passenger Vertical Feedback Potentiometer Circuit Short to Battery
B2319 Mirror Passenger Vertical Feedback Potentiometer Circuit Short to Ground
B2320 Mirror Driver Horizontal Feedback Potentiometer Circuit Failure
B2321 Mirror Driver Horizontal Feedback Potentiometer Circuit Open
B2322 Mirror Driver Horizontal Feedback Potentiometer Circuit Short to Battery
B2323 Mirror Driver Horizontal Feedback Potentiometer Circuit Short to Ground
B2324 Mirror Driver Vertical Feedback Potentiometer Circuit Failure
B2325 Mirror Driver Vertical Feedback Potentiometer Circuit Open
B2326 Mirror Driver Vertical Feedback Potentiometer Circuit Short to Battery
B2327 Mirror Driver Vertical Feedback Potentiometer Circuit Short to Ground
B2328 Column Reach Feedback Potentiometer Circuit Failure
B2329 Column Reach Feedback Potentiometer Circuit Open
B2330 Column Reach Feedback Potentiometer Circuit Short to Battery
B2331 Column Reach Feedback Potentiometer Circuit Short to Ground
B2332 Column Tilt Feedback Potentiometer Circuit Failure
B2333 Column Tilt Feedback Potentiometer Circuit Open
B2334 Column Tilt Feedback Potentiometer Circuit Short to Battery
B2335 Column Tilt Feedback Potentiometer Circuit Short to Ground
B2336 Mirror Switch Assembly Circuit Failure
B2337 Mirror Switch Assembly Circuit Open
B2338 Mirror Switch Assembly Circuit Short to Battery
B2339 Mirror Switch Assembly Circuit Short to Ground
B2340 Column Reach Motor Stalled
B2341 Column Tilt Motor Stalled
B2342 Seat Switch Reference Voltage Positive Common Open Circuit
B2343 Seat Switch Reference Voltage Positive Common Supply Low Voltage
B2344 Seat Switch Reference Voltage Positive Common Supply Voltage Fault
B2345 Seat Switch Reference Voltage Negative Common Open Circuit
B2346 Mirror Switch Reference Voltage Positive Common Open Circuit
B2347 Mirror Switch Reference Voltage Positive Common Supply Low Voltage
B2348 Mirror Switch Reference Voltage Positive Common Supply Voltage Fault
B2349 Mirror Switch Reference Voltage Negative Common Open Circuit
B2350 Steering Column Switch Circuit Short to Battery
B2351 Steering Column Switch Circuit Failure
B2352 Driver Memory Power Switch Indicator Circuit Short to Battery
B2353 Driver Mirror Power Driver Circuit Short Ground
B2354 Driver Mirror Horizontal / Vertical Feedback Potentiometer Circuit Open
B2355 Passenger Mirror Horizontal / Vertical Feedback Potentiometer Circuit Open
B2357 Driver Window Down Current Sense Low Circuit Failure
B2362 Remote Open/Close signal Circuit Short to Ground
B2363 Optical Sensor System Failure
B2364 Fuel Filler Door Circuit Open
B2365 B-pillar Power Sliding Door Open/Close Switch Input Ckt Short to Gnd
B2366 IP Power Sliding Door Open/Close switch Ckt Short to Gnd
B2367 Power Sliding Door Override Switch Input Ckt Short to Gnd
B2368 Steering Column Switch Circuit Out of Range
B2369 Chime OUTPUT Request Ckt Short to Ground
B2373 LED #1 Circuit Short to Battery
B2374 Power Sliding Detent (Latch) Circuit Failure
B2380 Heater Coolant Temp sensor circuit Short to GND
B2381 Heater Coolant Temp sensor circuit Open
B2384 Audio Reverse Aid Mute Input Ckt Failure
B2385 Audio Navigation Mute Input Ckt Failure
B2401 Audio Tape Deck Mechanism Fault

B2402 Audio CD/DJ Thermal Shutdown Fault
B2403 Audio CD/DJ Internal Fault
B2404 Audio Steering Wheel Switch Circuit Fault
B2405 Audio Single-Disc CD Player Thermal Shutdown Fault
B2406 Audio Single-Disc CD Player Internal Fault
B2416 Climate Control Recirculation Actuator Out of Limits
B2425 Remote Keyless Entry Out of Synchronization
B2426 Passenger Solar Radiation Sensor Circuit Open
B2427 Passenger Solar Radiation Sensor Circuit Short to Ground
B2428 A/C Post Heater Sensor #2 Circuit Failure
B2429 A/C Post Heater Sensor #2 Circuit Short to Ground
B2431 Transponder Programming Failed
B2432 Drivers Seat Belt Buckle Switch Circuit Open
B2433 Drivers Seat Belt Buckle Switch Circuit Short to Battery
B2434 Drivers Seat Belt Buckle Switch Circuit Short to Ground
B2435 Drivers Seat Belt Buckle Switch Resistance out of Range
B2436 Passengers Seat Belt Buckle Switch Circuit Open
B2437 Passengers Seat Belt Buckle Switch Circuit Short to Battery
B2438 Passengers Seat Belt Buckle Switch Circuit Short to Ground
B2439 Passengers Seat Belt Buckle Switch Resistance out of Range
B2440 Passenger Side, Side crash sensor mount fault
B2441 Driver Side, Side crash sensor mount fault
B2442 Intrusion Sensor Fault
B2443 Powertrain Performance Mode Switch Circuit failure
B2444 Driver Side Crash Sensor Internal Fault
B2445 Passenger Side Crash Sensor Internal Fault
B2446 RESCU/VEMS Input Circuit Open
B2447 RESCU/VEMS Input Circuit Short to Battery
B2448 RESCU/VEMS Input Circuit Short to Ground
B2449 Aux Heater Glow Plug Circuit Short to Ground
B2450 Aux Heater Glow Plug Circuit Open
B2451 Aux Heater Fuel Pump Circuit Short to Ground
B2452 Aux Heater Fuel Pump Circuit Open
B2453 Aux Heater Blower Fan Circuit Short to Ground
B2454 Aux Heater Blower Fan Circuit Open
B2455 Aux Heater Blower Faulted
B2456 Aux Heater Coolant Sensor Circuit Short to Ground
B2457 Aux Heater Coolant Sensor Circuit Open
B2458 Aux Heater Overheat Sensor Circuit Short to Ground
B2459 Aux Heater Overheat Sensor Circuit Open
B2460 Aux Heater Flame Sensor Circuit Short to Ground
B2461 Aux Heater Flame Sensor Circuit Open
B2462 Aux Heater Flame Out Fault
B2463 Aux Heater Overheat Fault
B2464 Aux Heater Start Time Exceeded
B2465 Aux Heater Start Counter Overrun/System Locked (same as below ?)
B2466 Aux Heater Overheat Counter Overrun/System Locked
B2467 Aux Heater Cool Down Time Exceeded (may be con to a453-5)
B2468 Aux Heater Coolant Pump Circuit Short to Ground
B2469 Aux Heater Coolant Pump Circuit Open
B2470 Interior Fan Control Circuit Short to Ground
B2471 Interior Fan Control Circuit Open
B2472 Fog Lamp Switch Failure
B2473 Passenger Door Disarm Switch ckt Short to Ground
B2474 Passenger Door Lock Switch Circuit Shorted to Ground
B2475 Passenger Door Unlock Switch Circuit Shorted to Ground

B2476 RADIO PRESENT SWITCH Ckt Failure
B2477 Module Configuration Failure
B2478 ANTI THEFT INPUT SIGNAL SHORT TO GROUND
B2479 BRAKE PARK SWITCH CIRCUIT SHORT TO GROUND
B2480 LF CORNER LAMP OUTPUT Ckt Short to Battery
B2481 Convertible Top Up/Down switch Fault
B2482 RF CORNER LAMP OUTPUT Ckt Short to Battery
B2483 Enable Signal Open Circuit
B2484 Disable Signal Short to Ground
B2485 LF SIDE REPEATER LAMP OUTPUT Ckt Short to Battery
B2487 RF SIDE REPEATER LAMP OUTPUT Ckt Short to Battery
B2489 UNDERHOOD LAMP OUTPUT CIRCUIT Failure
B2490 UNDERHOOD LAMP OUTPUT CIRCUIT Short to Battery
B2491 RF PARK LAMP OUTPUT CIRCUIT Short to Battery
B2492 Already Programmed (Test Mode DTC Only !!!)
B2493 LF PARK LAMP OUTPUT CIRCUIT Short to Battery
B2494 ANTI THEFT HORN OUTPUT CIRCUIT Short to Batt
B2495 ANTI THEFT HORN OUTPUT CIRCUIT Failure
B2496 ANTI THEFT HORN OUTPUT CIRCUIT Short to Gnd
B2499 COURTESY LAMP OUTPUT Failure
B2500 COURTESY LAMP OUTPUT Ckt Short to Battery
B2501 LF LAMP LOW BEAM CIRCUIT Failure
B2502 LF LAMP LOW BEAM CIRCUIT Short to Battery
B2503 RF LAMP LOW BEAM CIRCUIT Failure
B2504 RF LAMP LOW BEAM CIRCUIT Short to Battery
B2505 LF LAMP HIGH BEAM CIRCUIT Failure
B2506 LF LAMP HIGH BEAM CIRCUIT Short to Battery
B2507 RF LAMP HIGH BEAM CIRCUIT Failure
B2508 RF LAMP HIGH BEAM CIRCUIT Short to Battery
B2509 Rear Fog Lamp Switch Circuit Failure
B2510 Main Blower Motor Relay Circuit Short to Battery
B2511 Horn Output Relay Circuit Short to Battery
B2512 Front Fog Lamp Relay Ckt Short to Battery
B2513 Blower (Fan) Circuit Failure
B2514 Blower (Fan) Circuit Short to Vbatt
B2515 Heater Blower Relay Circuit Failure
B2516 Blower Control Circuit Failure
B2517 Emergency Power Off System Faulted
B2518 Compressor Overtemp Fault
B2519 High Mount Stop Lamp Circuit Failure
B2520 High Mount Stop Lamp Circuit Short to Battery
B2523 License Lamp Circuit Failure
B2524 License Lamp Circuit Short to Battery
B2525 Left Rear Backup Lamp Circuit Failure
B2526 Left Rear Backup Lamp Circuit Short to Battery
B2527 Left Rear Stop lamp Circuit Failure
B2528 Left Rear Stop lamp Circuit Short to Battery
B2529 Left Rear Turn Lamp Circuit Failure
B2530 Left Rear Turn Lamp Circuit Short to Battery
B2531 Right Rear Backup Lamp Circuit Failure
B2532 Right Rear Backup Lamp Circuit Short to Battery
B2533 Right Rear Stop lamp Circuit Failure
B2534 Right Rear Stop lamp Circuit Short to Battery
B2535 Right Rear Turn Lamp Circuit Failure
B2536 Right Rear Turn Lamp Circuit Short to Battery
B2539 Aux A/C Mode Position Reference Circuit Short to Ground

B2540 Aux A/C Mode Position Reference Circuit Short to Battery
B2543 Aux A/C Control Switch Reference Circuit Short to Ground
B2544 Aux A/C Control Switch Reference Circuit Short to Battery
B2545 System Power Relay Circuit Short to Battery
B2546 System Power Relay Circuit Failure
B2550 LAMP DOME OUTPUT Circuit Short to Ground
B2553 Disable Signal Output Circuit Short to Battery
B2554 LAMP DOME OUTPUT Circuit Failure
B2555 LAMP DOME OUTPUT Circuit Short to Battery
B2556 Enable Signal Circuit Short to Battery
B2557 Left Power Sliding Door Open/Close Output Circuit Short to Battery
B2558 Right Power Sliding Door Open/Close Output Circuit Short to Battery
B2559 Aux A/C Blower Motor Relay Circuit Short to Battery
B2560 Aux A/C Blower Motor Relay Circuit Short to Ground
B2561 Aux A/C Blower Speed 1 Circuit Failure
B2562 Aux A/C Blower Speed 1 Circuit Short to Ground
B2563 Aux A/C Blower Speed 2 Circuit Failure
B2564 Aux A/C Blower Speed 2 Circuit Short to Ground
B2565 Right Tail Lamp Circuit Failure
B2566 Right Tail Lamp Circuit Short to Ground
B2567 Reverse Mirror Output Circuit Failure
B2568 Reverse Mirror Output Circuit Short to Ground
B2569 Liftgate Disarm Switch Circuit Short to Ground
B2570 Right Lamp Outage Signal Circuit Short to Ground
B2571 Left Lamp Outage Signal Circuit Short to Ground
B2580 Aux Blower Sense Switch Circuit Failure
B2581 Passenger Seat Occupant Detection Circuit Short To Ground
B2582 Passenger Seat Occupant Detection Circuit Open
B2583 Child Seat Detection Circuit Short to Ground
B2584 Child Seat Detection Circuit Open
B2585 Anti Theft Input Signal Circuit Short To Battery
B2586 Headlamp Mode Select Circuit Failure
B2587 Passenger Seat Occupant Detection Circuit Short To Battery
B2588 Child Seat Detection Circuit Short To Battery
B2589 Unexpected Door Reversal During Close
B2590 Vehicle Park/Speed Signal Circuit Failure
B2591 Detent Signal Missing During Unlatch
B2592 PSD Not Fully Closed (Module Commanded Successfully)
B2593 Power Sliding Door Opened During Module Close Command
B2594 No Movement Detected After an Unlatch During Power Open
B2595 Anti Theft Input Signal Circuit Failure
B2596 Headlamp Aim Output Relay Circuit Short To Battery
B2597 Headlamp Aim Output Relay Circuit Failure
B2598 Headlamp Relay Circuit Failure
B2599 Tailgate Release Open Circuit
B2600 Double Locking Door Motor Frozen
B2601 No Latch Signal Sensed on Closing and Door Reversed
B2602 Missing Latch Signal During Power Sliding Door Unlatch
B2603 PSD Not Fully Closed During Self-Test
B2604 Power Sliding Door On/Off Switch Open Circuit
B2605 Disable Signal Open Circuit
B2606 A/C Temperature Sensor Out of Range