

uCables.com

Tecnologias de diagnostico y reparacion de automoviles

# U - Generic OBD-II Network Codes

**Code Description**

<b>U0001</b>	High Speed CAN Communication Bus
<b>U0002</b>	High Speed CAN Communication Bus Performance
<b>U0003</b>	High Speed CAN Communication Bus (+) Open
<b>U0004</b>	High Speed CAN Communication Bus (+) Low
<b>U0005</b>	High Speed CAN Communication Bus (+) High
<b>U0006</b>	High Speed CAN Communication Bus (-) Open
<b>U0007</b>	High Speed CAN Communication Bus (-) Low
<b>U0008</b>	High Speed CAN Communication Bus (-) High
<b>U0009</b>	High Speed CAN Communication Bus (-) shorted to Bus (+)
<b>U0010</b>	Medium Speed CAN Communication Bus
<b>U0011</b>	Medium Speed CAN Communication Bus Performance
<b>U0012</b>	Medium Speed CAN Communication Bus (+) Open
<b>U0013</b>	Medium Speed CAN Communication Bus (+) Low
<b>U0014</b>	Medium Speed CAN Communication Bus (+) High
<b>U0015</b>	Medium Speed CAN Communication Bus (-) Open
<b>U0016</b>	Medium Speed CAN Communication Bus (-) Low
<b>U0017</b>	Medium Speed CAN Communication Bus (-) High
<b>U0018</b>	Medium Speed CAN Communication Bus (-) shorted to Bus (+)
<b>U0019</b>	Low Speed CAN Communication Bus
<b>U0020</b>	Low Speed CAN Communication Bus Performance
<b>U0021</b>	Low Speed CAN Communication Bus (+) Open
<b>U0022</b>	Low Speed CAN Communication Bus (+) Low
<b>U0023</b>	Low Speed CAN Communication Bus (+) High
<b>U0024</b>	Low Speed CAN Communication Bus (-) Open
<b>U0025</b>	Low Speed CAN Communication Bus (-) Low
<b>U0026</b>	Low Speed CAN Communication Bus (-) High
<b>U0027</b>	Low Speed CAN Communication Bus (-) shorted to Bus (+)
<b>U0028</b>	Vehicle Communication Bus A
<b>U0029</b>	Vehicle Communication Bus A Performance
<b>U0030</b>	Vehicle Communication Bus A (+) Open
<b>U0031</b>	Vehicle Communication Bus A (+) Low
<b>U0032</b>	Vehicle Communication Bus A (+) High
<b>U0033</b>	Vehicle Communication Bus A (-) Open
<b>U0034</b>	Vehicle Communication Bus A (-) Low
<b>U0035</b>	Vehicle Communication Bus A (-) High
<b>U0036</b>	Vehicle Communication Bus A (-) shorted to Bus A (+)
<b>U0037</b>	Vehicle Communication Bus B
<b>U0038</b>	Vehicle Communication Bus B Performance
<b>U0039</b>	Vehicle Communication Bus B (+) Open
<b>U0040</b>	Vehicle Communication Bus B (+) Low
<b>U0041</b>	Vehicle Communication Bus B (+) High
<b>U0042</b>	Vehicle Communication Bus B (-) Open
<b>U0043</b>	Vehicle Communication Bus B (-) Low
<b>U0044</b>	Vehicle Communication Bus B (-) High
<b>U0045</b>	Vehicle Communication Bus B (-) shorted to Bus B (+)
<b>U0046</b>	Vehicle Communication Bus C
<b>U0047</b>	Vehicle Communication Bus C Performance
<b>U0048</b>	Vehicle Communication Bus C (+) Open

**U0049** Vehicle Communication Bus C (+) Low  
**U0050** Vehicle Communication Bus C (+) High  
**U0051** Vehicle Communication Bus C (-) Open  
**U0052** Vehicle Communication Bus C (-) Low  
**U0053** Vehicle Communication Bus C (-) High  
**U0054** Vehicle Communication Bus C (-) shorted to Bus C (+)  
**U0055** Vehicle Communication Bus D  
**U0056** Vehicle Communication Bus D Performance  
**U0057** Vehicle Communication Bus D (+) Open  
**U0058** Vehicle Communication Bus D (+) Low  
**U0059** Vehicle Communication Bus D (+) High  
**U0060** Vehicle Communication Bus D (-) Open  
**U0061** Vehicle Communication Bus D (-) Low  
**U0062** Vehicle Communication Bus D (-) High  
**U0063** Vehicle Communication Bus D (-) shorted to Bus D (+)  
**U0064** Vehicle Communication Bus E  
**U0065** Vehicle Communication Bus E Performance  
**U0066** Vehicle Communication Bus E (+) Open  
**U0067** Vehicle Communication Bus E (+) Low  
**U0068** Vehicle Communication Bus E (+) High  
**U0069** Vehicle Communication Bus E (-) Open  
**U0070** Vehicle Communication Bus E (-) Low  
**U0071** Vehicle Communication Bus E (-) High  
**U0072** Vehicle Communication Bus E (-) shorted to Bus E (+)  
**U0073** Control Module Communication Bus Off  
**U0074** Reserved by Document  
**U0075** Reserved by Document  
**U0076** Reserved by Document  
**U0077** Reserved by Document  
**U0078** Reserved by Document  
**U0079** Reserved by Document  
**U0080** Reserved by Document  
**U0081** Reserved by Document  
**U0082** Reserved by Document  
**U0083** Reserved by Document  
**U0084** Reserved by Document  
**U0085** Reserved by Document  
**U0086** Reserved by Document  
**U0087** Reserved by Document  
**U0088** Reserved by Document  
**U0089** Reserved by Document  
**U0090** Reserved by Document  
**U0091** Reserved by Document  
**U0092** Reserved by Document  
**U0093** Reserved by Document  
**U0094** Reserved by Document  
**U0095** Reserved by Document  
**U0096** Reserved by Document  
**U0097** Reserved by Document  
**U0098** Reserved by Document  
**U0099** Reserved by Document  
**U0100** Lost Communication With ECM/PCM "A"  
**U0101** Lost Communication with TCM  
**U0102** Lost Communication with Transfer Case Control Module  
**U0103** Lost Communication With Gear Shift Module  
**U0104** Lost Communication With Cruise Control Module

**U0105** Lost Communication With Fuel Injector Control Module  
**U0106** Lost Communication With Glow Plug Control Module  
**U0107** Lost Communication With Throttle Actuator Control Module  
**U0108** Lost Communication With Alternative Fuel Control Module  
**U0109** Lost Communication With Fuel Pump Control Module  
**U0110** Lost Communication With Drive Motor Control Module  
**U0111** Lost Communication With Battery Energy Control Module "A"  
**U0112** Lost Communication With Battery Energy Control Module "B"  
**U0113** Lost Communication With Emissions Critical Control Information  
**U0114** Lost Communication With Four-Wheel Drive Clutch Control Module  
**U0115** Lost Communication With ECM/PCM "B"  
**U0116** Reserved by Document  
**U0117** Reserved by Document  
**U0118** Reserved by Document  
**U0119** Reserved by Document  
**U0120** Reserved by Document  
**U0121** Lost Communication With Anti-Lock Brake System (ABS) Control Module  
**U0122** Lost Communication With Vehicle Dynamics Control Module  
**U0123** Lost Communication With Yaw Rate Sensor Module  
**U0124** Lost Communication With Lateral Acceleration Sensor Module  
**U0125** Lost Communication With Multi-axis Acceleration Sensor Module  
**U0126** Lost Communication With Steering Angle Sensor Module  
**U0127** Lost Communication With Tire Pressure Monitor Module  
**U0128** Lost Communication With Park Brake Control Module  
**U0129** Lost Communication With Brake System Control Module  
**U0130** Lost Communication With Steering Effort Control Module  
**U0131** Lost Communication With Power Steering Control Module  
**U0132** Lost Communication With Ride Level Control Module  
**U0133** Reserved by Document  
**U0134** Reserved by Document  
**U0135** Reserved by Document  
**U0136** Reserved by Document  
**U0137** Reserved by Document  
**U0138** Reserved by Document  
**U0139** Reserved by Document  
**U0140** Lost Communication With Body Control Module  
**U0141** Lost Communication With Body Control Module "A"  
**U0142** Lost Communication With Body Control Module "B"  
**U0143** Lost Communication With Body Control Module "C"  
**U0144** Lost Communication With Body Control Module "D"  
**U0145** Lost Communication With Body Control Module "E"  
**U0146** Lost Communication With Gateway "A"  
**U0147** Lost Communication With Gateway "B"  
**U0148** Lost Communication With Gateway "C"  
**U0149** Lost Communication With Gateway "D"  
**U0150** Lost Communication With Gateway "E"  
**U0151** Lost Communication With Restraints Control Module  
**U0152** Lost Communication With Side Restraints Control Module  
**U0153** Lost Communication With Side Restraints Control Module  
**U0154** Lost Communication With Restraints Occupant Sensing Control Module  
**U0155** Lost Communication With Instrument Panel Cluster (IPC) Control Module  
**U0156** Lost Communication With Information Center "A"  
**U0157** Lost Communication With Information Center "B"  
**U0158** Lost Communication With Head Up Display  
**U0159** Lost Communication With Parking Assist Control Module  
**U0160** Lost Communication With Audible Alert Control Module

<b>U0161</b>	Lost Communication With Compass Module
<b>U0162</b>	Lost Communication With Navigation Display Module
<b>U0163</b>	Lost Communication With Navigation Control Module
<b>U0164</b>	Lost Communication With HVAC Control Module
<b>U0165</b>	Lost Communication With HVAC Control Module
<b>U0166</b>	Lost Communication With Auxiliary Heater Control Module
<b>U0167</b>	Lost Communication With Vehicle Immobilizer Control Module
<b>U0168</b>	Lost Communication With Vehicle Security Control Module
<b>U0169</b>	Lost Communication With Sunroof Control Module
<b>U0170</b>	Lost Communication With "Restraints System Sensor A"
<b>U0171</b>	Lost Communication With "Restraints System Sensor B"
<b>U0172</b>	Lost Communication With "Restraints System Sensor C"
<b>U0173</b>	Lost Communication With "Restraints System Sensor D"
<b>U0174</b>	Lost Communication With "Restraints System Sensor E"
<b>U0175</b>	Lost Communication With "Restraints System Sensor F"
<b>U0176</b>	Lost Communication With "Restraints System Sensor G"
<b>U0177</b>	Lost Communication With "Restraints System Sensor H"
<b>U0178</b>	Lost Communication With "Restraints System Sensor I"
<b>U0179</b>	Lost Communication With "Restraints System Sensor J"
<b>U0180</b>	Lost Communication With Automatic Lighting Control Module
<b>U0181</b>	Lost Communication With Headlamp Leveling Control Module
<b>U0182</b>	Lost Communication With Lighting Control Module
<b>U0183</b>	Lost Communication With Lighting Control Module
<b>U0184</b>	Lost Communication With Radio
<b>U0185</b>	Lost Communication With Antenna Control Module
<b>U0186</b>	Lost Communication With Audio Amplifier
<b>U0187</b>	Lost Communication With Digital Disc Player/Changer Module "A"
<b>U0188</b>	Lost Communication With Digital Disc Player/Changer Module "B"
<b>U0189</b>	Lost Communication With Digital Disc Player/Changer Module "C"
<b>U0190</b>	Lost Communication With Digital Disc Player/Changer Module "D"
<b>U0191</b>	Lost Communication With Television
<b>U0192</b>	Lost Communication With Personal Computer
<b>U0193</b>	Lost Communication With "Digital Audio Control Module A"
<b>U0194</b>	Lost Communication With "Digital Audio Control Module B"
<b>U0195</b>	Lost Communication With Subscription Entertainment Receiver Module
<b>U0196</b>	Lost Communication With Rear Seat Entertainment Control Module
<b>U0197</b>	Lost Communication With Telephone Control Module
<b>U0198</b>	Lost Communication With Telematic Control Module
<b>U0199</b>	Lost Communication With "Door Control Module A"
<b>U0200</b>	Lost Communication With "Door Control Module B"
<b>U0201</b>	Lost Communication With "Door Control Module C"
<b>U0202</b>	Lost Communication With "Door Control Module D"
<b>U0203</b>	Lost Communication With "Door Control Module E"
<b>U0204</b>	Lost Communication With "Door Control Module F"
<b>U0205</b>	Lost Communication With "Door Control Module G"
<b>U0206</b>	Lost Communication With Folding Top Control Module
<b>U0207</b>	Lost Communication With Movable Roof Control Module
<b>U0208</b>	Lost Communication With "Seat Control Module A"
<b>U0209</b>	Lost Communication With "Seat Control Module B"
<b>U0210</b>	Lost Communication With "Seat Control Module C"
<b>U0211</b>	Lost Communication With "Seat Control Module D"
<b>U0212</b>	Lost Communication With Steering Column Control Module
<b>U0213</b>	Lost Communication With Mirror Control Module
<b>U0214</b>	Lost Communication With Remote Function Actuation
<b>U0215</b>	Lost Communication With "Door Switch A"
<b>U0216</b>	Lost Communication With "Door Switch B"

<b>U0217</b>	Lost Communication With "Door Switch C"
<b>U0218</b>	Lost Communication With "Door Switch D"
<b>U0219</b>	Lost Communication With "Door Switch E"
<b>U0220</b>	Lost Communication With "Door Switch F"
<b>U0221</b>	Lost Communication With "Door Switch G"
<b>U0222</b>	Lost Communication With "Door Window Motor A"
<b>U0223</b>	Lost Communication With "Door Window Motor B"
<b>U0224</b>	Lost Communication With "Door Window Motor C"
<b>U0225</b>	Lost Communication With "Door Window Motor D"
<b>U0226</b>	Lost Communication With "Door Window Motor E"
<b>U0227</b>	Lost Communication With "Door Window Motor F"
<b>U0228</b>	Lost Communication With "Door Window Motor G"
<b>U0229</b>	Lost Communication With Heated Steering Wheel Module
<b>U0230</b>	Lost Communication With Rear Gate Module
<b>U0231</b>	Lost Communication With Rain Sensing Module
<b>U0232</b>	Lost Communication With Side Obstacle Detection Control Module
<b>U0233</b>	Lost Communication With Side Obstacle Detection Control Module
<b>U0234</b>	Lost Communication With Convenience Recall Module
<b>U0235</b>	Lost Communication With Cruise Control Front Distance Range Sensor
<b>U0300</b>	Internal Control Module Software Incompatibility
<b>U0301</b>	Software Incompatibility with ECM/PCM
<b>U0302</b>	Software Incompatibility with Transmission Control Module
<b>U0303</b>	Software Incompatibility with Transfer Case Control Module
<b>U0304</b>	Software Incompatibility with Gear Shift Control Module
<b>U0305</b>	Software Incompatibility with Cruise Control Module
<b>U0306</b>	Software Incompatibility with Fuel Injector Control Module
<b>U0307</b>	Software Incompatibility with Glow Plug Control Module
<b>U0308</b>	Software Incompatibility with Throttle Actuator Control Module
<b>U0309</b>	Software Incompatibility with Alternative Fuel Control Module
<b>U0310</b>	Software Incompatibility with Fuel Pump Control Module
<b>U0311</b>	Software Incompatibility with Drive Motor Control Module
<b>U0312</b>	Software Incompatibility with Battery Energy Control Module A
<b>U0313</b>	Software Incompatibility with Battery Energy Control Module B
<b>U0314</b>	Software Incompatibility with Four-Wheel Drive Clutch Control Module
<b>U0315</b>	Software Incompatibility with Anti-Lock Brake System Control Module
<b>U0316</b>	Software Incompatibility with Vehicle Dynamics Control Module
<b>U0317</b>	Software Incompatibility with Park Brake Control Module
<b>U0318</b>	Software Incompatibility with Brake System Control Module
<b>U0319</b>	Software Incompatibility with Steering Effort Control Module
<b>U0320</b>	Software Incompatibility with Power Steering Control Module
<b>U0321</b>	Software Incompatibility with Ride Level Control Module
<b>U0322</b>	Software Incompatibility with Body Control Module
<b>U0323</b>	Software Incompatibility with Instrument Panel Control Module
<b>U0324</b>	Software Incompatibility with HVAC Control Module
<b>U0325</b>	Software Incompatibility with Auxiliary Heater Control Module
<b>U0326</b>	Software Incompatibility with Vehicle Immobilizer Control Module
<b>U0327</b>	Software Incompatibility with Vehicle Security Control Module
<b>U0328</b>	Software Incompatibility with Steering Angle Sensor Module
<b>U0329</b>	Software Incompatibility with Steering Column Control Module
<b>U0330</b>	Software Incompatibility with Tire Pressure Monitor Module
<b>U0331</b>	Software Incompatibility with Body Control Module "A"
<b>U0400</b>	Invalid Data Received
<b>U0401</b>	Invalid Data Received From ECM/PCM
<b>U0402</b>	Invalid Data Received From Transmission Control Module
<b>U0403</b>	Invalid Data Received From Transfer Case Control Module
<b>U0404</b>	Invalid Data Received From Gear Shift Control Module

- U0405** Invalid Data Received From Cruise Control Module
- U0406** Invalid Data Received From Fuel Injector Control Module
- U0407** Invalid Data Received From Glow Plug Control Module
- U0408** Invalid Data Received From Throttle Actuator Control Module
- U0409** Invalid Data Received From Alternative Fuel Control Module
- U0410** Invalid Data Received From Fuel Pump Control Module
- U0411** Invalid Data Received From Drive Motor Control Module
- U0412** Invalid Data Received From Battery Energy Control Module A
- U0413** Invalid Data Received From Battery Energy Control Module B
- U0414** Invalid Data Received From Four-Wheel Drive Clutch Control Module
- U0415** Invalid Data Received From Anti-Lock Brake System Control Module
- U0416** Invalid Data Received From Vehicle Dynamics Control Module
- U0417** Invalid Data Received From Park Brake Control Module
- U0418** Invalid Data Received From Brake System Control Module
- U0419** Invalid Data Received From Steering Effort Control Module
- U0420** Invalid Data Received From Power Steering Control Module
- U0421** Invalid Data Received From Ride Level Control Module
- U0422** Invalid Data Received From Body Control Module
- U0423** Invalid Data Received From Instrument Panel Control Module
- U0424** Invalid Data Received From HVAC Control Module
- U0425** Invalid Data Received From Auxiliary Heater Control Module
- U0426** Invalid Data Received From Vehicle Immobilizer Control Module
- U0427** Invalid Data Received From Vehicle Security Control Module
- U0428** Invalid Data Received From Steering Angle Sensor Module
- U0429** Invalid Data Received From Steering Column Control Module
- U0430** Invalid Data Received From Tire Pressure Monitor Module
- U0431** Invalid Data Received From Body Control Module "A"