

uCables.com

Tecnologias de diagnostico y reparacion de automoviles

Lexus OBD-II Trouble codes

Code	Description
P1100	BARO Sensor Circuit Malfunction
P1120	Accelerator Pedal Position Sensor Circuit Malfunction
P1121	Accelerator Pedal Position Sensor Range/Performance Problem
P1125	Throttle Control Motor Circuit Malfunction
P1126	Magnetic Clutch Circuit Malfunction
P1127	ECTS Actuator Power Source Circuit Malfunction
P1128	Throttle Control Motor Lock Malfunction
P1129	Electronic Throttle Control System
P1130	Air/Fuel Ratio Sensor Circuit Range/Performance Malfunction (Bank 1 Sensor 1)
P1133	Air/Fuel Ratio Sensor Circuit Response Malfunction (Bank 1 Sensor 1)
P1135	Air/Fuel Ratio Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)
P1150	Air/Fuel Ratio Sensor Circuit Range/Performance Malfunction (Bank 2 Sensor 1)
P1153	Air/Fuel Ratio Sensor Circuit Response Malfunction (Bank 2 Sensor 1)
P1155	Air/Fuel Ratio Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)
P1200	Fuel Pump Relay/ECU Circuit Malfunction
P1300	Igniter Circuit Malfunction (Bank 1 Or No. 1)
P1305	Igniter Circuit Malfunction, (Bank 2 Or No. 2)
P1310	Igniter Circuit Malfunction (No. 3)
P1315	Igniter Circuit Malfunction (No. 4)
P1320	Igniter Circuit Malfunction (No. 5)
P1325	Igniter Circuit Malfunction (No. 6)
P1330	Igniter Circuit Malfunction (No. 7)
P1335	CKP Sensor Circuit Malfunction During Engine Running
P1340	Igniter Circuit Malfunction (No. 8)
P1345	VVT Sensor Circuit Malfunction (Bank 1)
P1346	VVT Sensor Rang/Performance Problem (Bank 1)
P1349	VVT System Malfunction (Bank 1)
P1350	VVT Sensor Circuit Malfunction (Bank 2)
P1351	VVT Sensor Range/Performance Problem (Bank 2)
P1354	VVT System Malfunction (Bank 2)
P1400	Sub-TP Sensor Malfunction
P1401	Sub-TP Sensor Range/Performance
P1410	EGR Valve Position Sensor Circuit Malfunction
P1411	EGR Valve Position Sensor Circuit Range/Performance Malfunction
P1500	Starter Signal Circuit Malfunction
P1520	Stop Lamp Switch Malfunction
P1565	Cruise Control Main Switch Circuit Malfunction
P1566	Cruise Control Main Switch Circuit Malfunction
P1600	ECM BATT Malfunction
P1605	Knock Control CPU Malfunction
P1633	ECM Malfunction (ETCS Circuit)
P1645	Body ECU Malfunction
P1656	OCV Circuit Malfunction (Bank 1)
P1663	OCV Circuit Malfunction (Bank 2)
P1780	PNP Switch Malfunction
B2785	Ignition Switch On Malfunction (Immobilizer System)
B2786	Ignition Switch Off Malfunction (Immobilizer System)
B2785	Ignition Switch On Malfunction (Immobilizer System)

- B2791 Key Unlock Warning Switch Malfunction (Immobilizer System)
- B2795 Unmatch Key Code (Immobilizer System)
- B2796 No Communication In Immobilizer System
- B2797 Communication Malfunction No. 1 (Immobilizer System)
- B2798 Communication Malfunction No. 2 (Immobilizer System)